

Installation Instructions for 425A 6600V Spacing Gasket

This document provides information on the correct assembly and usage of the spacing gasket designed for the 425A adapter to ensure safety and integrity during transit.

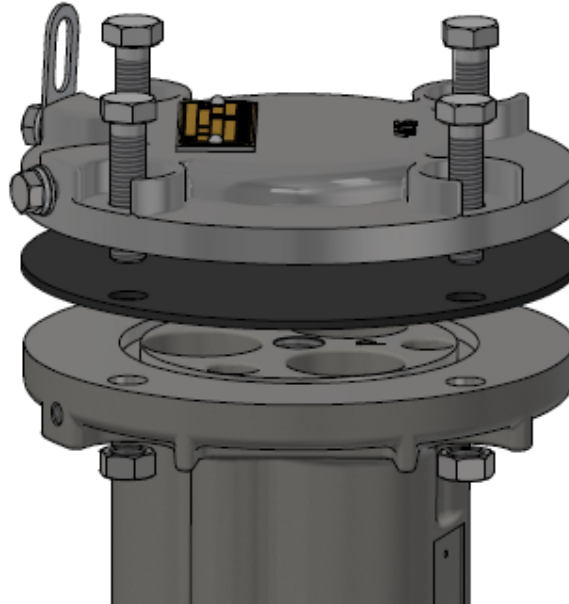


Figure 1 Exploded view of adapter cover plate assembly.

Assembly

1. Inspect the gasket to ensure it is free of defects and debris before installation.
2. Place the gasket according to the exploded view in figure 1.
3. Once in place, verify that the gasket aligns correctly and is fit tightly to ensure no movement.

Usage

The spacing gasket must be removed before the adapter is energised. The spacing gasket may be discarded post transit and cannot be used on an energised adapter.

